

FEMTO 1100 LED Malfunction

Number display unstable or E02 error

Remove FEMTO cover



Check for Loose wire/data cable



Tighten cable and retest

Clean debris on the gear magnet

Loosen screws for speed sensor holder below bottom gear

Adjust the speed sensor (200 rpm)

Problem solved

Done

Display working normal

Replace Speed sensor

Display strange symbols instead of number

Reset FEMTO by turning off power



Problem solved

Done

Remove FEMTO cover



Check for Loose wire/data cable



Tighten cable and retest

Replace FEMTO motor drive



Problem solved

